

Pattern Corrections - Essential Tote Print Pattern

Please make note of the following pattern corrections. My sincere apologies for these. This is not typical, and I take great pains to avoid errors, but there are errors on this one.

Northcott Stitch in Time Version Copyright 2016 only:


Amount needed for Upper Exterior

If you are using the Northcott Stitch in Time fabric with the sewing machines as shown to the right, the fabric design runs with the selvage, so you will need additional fabric to accommodate this design – 5/8 of a yard instead of 1/3 yard for the upper exterior. When you cut out the 9" x 20" upper exterior pieces, it will actually only show a portion of the quilt blocks on the bottom, not the full block.



Missing text on the bottom of Page 6:

- Fold lower edge of interior panels up over pocket and press along the line you drew. Stitch 3/8" from fold.

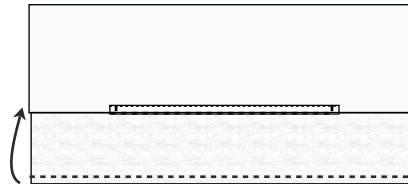

Replacement p. 9–All Print Versions copyright 2016

Zipper Closure Version

If you'd rather have a zipper closure instead of a magnetic snap closure, follow the modifications below. There are a few changes to the cutting instructions and you'll need to skip over the magnetic snap instructions and instead follow the Inset Zipper Panel instructions on the following pages.

CUTTING FABRIC

Follow the cutting instructions on **Pages 1-2**, except follow the instructions below for cutting the Interior fabric:

Interior

5/8 yd for interior front and back for inset zipper panel version

- Cut two pieces 16-1/2" H x 20" W for interior front and back
- Cut two pieces 3-3/4" H x 16" W for interior inset zipper panel pieces
- For a 1" wide zipper, cut one piece 2" H x 4-1/2" W for the zipper tab **OR**
- For a 1-1/2" wide zipper, cut one piece 2-1/2" H x 4-1/2" W for the zipper tab

CUTTING INTERFACING

Cut all of the interfacing pieces listed on **Pages 2-3** except as follows:

Firm Interfacing

- Omit magnetic snap reinforcements
- Also cut two pieces 3-1/4" H x 15" W to stabilize interior inset zipper panel pieces. Center on wrong side of fabric and fuse according to manufacturer's directions.

Medium weight interfacing

The size of the interior front and interior back interfacing changes:

- Cut two pieces 16-1/2" H x 20" W to stabilize interior front and back for zipper version.

Stabilizer

- No changes

SEWING

Follow the sewing instructions for the **Magnetic Snap Version** starting on **Page 3** through Steps 1 and 2 of the **Interior** section on **Page 7**.

Skip the Magnetic Snap Installation steps, Steps 3 and 4 of the **Interior** section. Instead, follow the section **Inset Zipper Panel** on **Page 10**.